


View this page with this edge up.

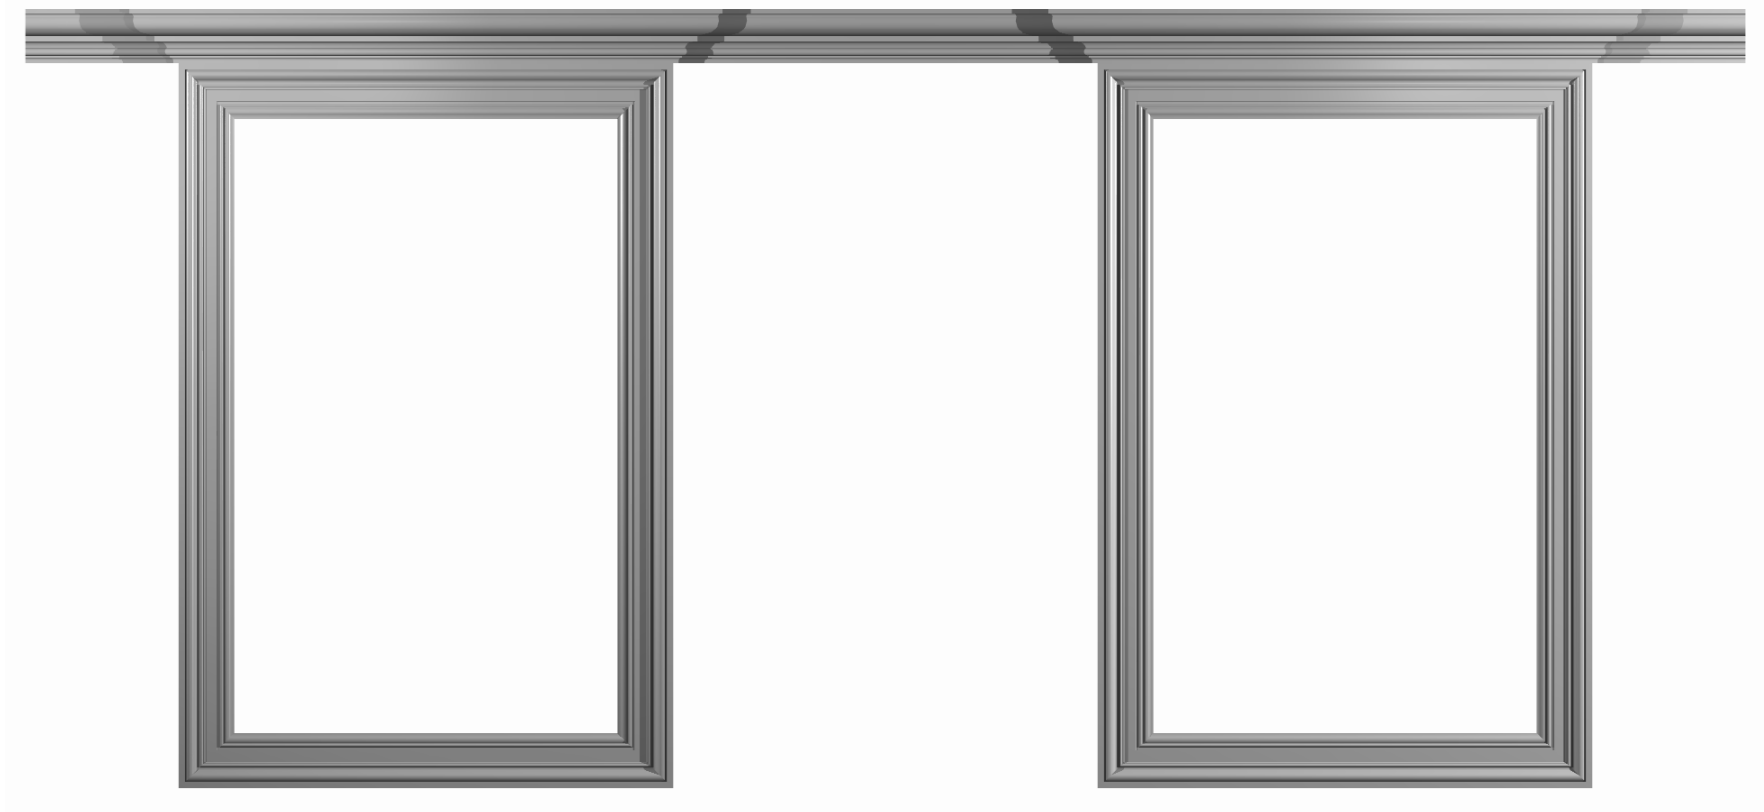

This application shows a useful means of crowning a room where the windows are set high. Instead of using a crown that is small enough to leave room between the bottom of the crown and the top of the casing but too small in scale for the space, wrap the crown over the casing or a piece of square stock resting on the casing. Obviously, many factors come into play here and the limited range of adjustment makes this complex, but the results make it worthwhile. The mouldings shown here are the AB129 casing and the AB408 crown.