











A & B Wood Design


800.669.9871 Fax 203.888.0493 | www.abwooddesign.com



Contents

A & B Designs Stock 3-24				
Backbands				
Baseboards11-14				
Base Caps				
Beadboards24				
Beads				
Casings				
Chair Rails				
Craftsman				
Crowns				
Crowns - Solids				
Crown Extenders				
Panel Mouldings5-6, 11-14				
Plinth				
Shoe Mouldings5-6				
Stools				
Pyramid PVC Stock 25-28				
Oxford Classic Wainscot 29-35				
Stock – Beadboard				
Custom – Paneled Wainscot 32-35				
Exterior Grade S4S Boards 29-30				
Moulding Combinations 36-38				
A & B Designs Special Order 39-55				
Backbands54-55				
Baseboards				
Base Caps				

	Beads	54
	Casings	53
	Chair Rails	49
	Crowns 50-	52
	Crowns - Solid	53
	Crown Extenders	55
	Panel Mouldings	4(
	Plinths	54
	Shoe Mouldings	4(
Hi	storic Mouldings56-6	54
Hi	storic Mouldings 56-6	
Hi		57
Hi	Federal	57 58
Hi	Federal	57 58 59
Hi	Federal Colonial Greek Revival	57 58 59 60
Hi	Federal Colonial Greek Revival Art Deco	57 58 59 60 62
Hi	Federal Colonial Greek Revival Art Deco Wren & Georgian 61-	57 58 59 60 62 63




AB001 5, 48	AB135 45	AB409 17	AB/HM910157
AB002 40	AB136 9	AB409PVC 26	AB/HM920157
AB003 5	AB136-39	AB410 51	AB/HM930157
AB004 40, 47	AB137 10	AB501 18, 37	AB/HM940157
AB005 40	AB138 46	AB501PVC 27	
AB006 5, 12	AB139 46	AB501-4 18	AB/HM9102 58
AB008 40	AB201 46	AB501-4PVC 26	AB/HM9202 58
AB009 5, 14	AB202 46	AB502 52	AB/HM930258
AB010 5, 13	AB203 11	AB503 19	AB/HM9402 58
AB020 40	AB204 12	AB503PVC 28	7.271
AB021 5	AB205-1 47	AB504 19	AB/HM9103 59
AB022 40	AB205-2 47	AB504PVC 28	AB/HM9203 59
AB023 6	AB206 12, 37	AB505 20	AB/HM9203-1 59
AB025 6, 11, 38	AB207-1 47	AB506 52	AB/HM930359
AB026 6, 12, 48	AB207-2 47	AB507 52	AB/HM9403-1 59
AB027 6	AB207-3 47	AB508 52	AB/HM9403-2 59
AB027-2 6	AB208 47	AB50921, 37	712/1 IIVIO 100 Z 00
AB028 6, 48	AB209 47	AB509PVC 27	AB/HM910460
AB101 41	AB210-1 48	AB601 53	AB/HM9204 60
AB102 41	AB210-2 48	AB602 10, 21	AB/HM9304 60
AB103 41	AB211 48	AB603 53	AB/HM9404 60
AB104 41	AB212 32	AB604 53	AB/111/1340400
AB105 41	AB212-1 13, 37	AB605 53	AB/HM9105 4
AB106 42	AB212-7 13, 37	AB606 53	AB/HM9105-3 4
AB107 42	AB213 48	AB61 54	AB/HM9205 4
AB108 42	AB214 48	AB62 53	AB/HM9205-5 4
AB109 7	AB219 14, 32	AB62 55	AB/HM9305 4
AB110 7, 32	AB301 15	AB64 55	AB/HM9405 4
AB111	AB302 49	AB65-1 7, 24	AB/110194034
AB112 42	AB303 15, 38	AB66	AB/HM9106 61
AB113 42	AB304 49	AB67 54	AB/HM920661
AB114 42	AB305 49	AB68-3 22	AB/HM9306 61
AB114 42 AB115 43	AB307 49	AB68-4 22	AB/HM9406 61
AB116 43	AB308 49	AB69 23	AB/HIVI940001
			AD/HM0407 62
AB118 43 AB121 43	AB309 49	AB701 31 AB702 31	AB/HM9107 62
AB123 43	AB310 15, 32 AB311 15, 32	AB702 31	AB/HM9207 62 AB/HM9307 62
AB124 44	AB311-2 15, 31	AB704 31	AB/HM9407 62
AB125 44	AB311-3 15, 31	AB705 31	AB/HIVI9407 02
AB126 44	AB401 50	AB76 24	AB/HM0100 63
AB127 44	AB401 16	AB81 55	AB/HM9109 63 AB/HM9209 63
AB128 7	AB402PVC 25	AB8223, 38	AB/HM930963
AB129 7	AB402-4 16, 38	AB83 55	AB/HM9409 63
AB130 44	AB402-4 10, 36 AB402-4PVC 25	AB84-4 23, 38	AB/HIVI9409 03
AB131 44	AB402-6 17	· ·	A D/UM0110 64
	AB402-6	AB85 55 AB86 24	AB/HM911064
AB132 8		AB86	AB/HM9210 64
AB132-2 8 AB132-4 8	AB404 50	AB96-1 24	AB/HM931064
	AB405 16	AD90-1	AB/HM941064
AB133 45	AB406 50		
AB134 45	AB407 51		
AB134-5 8	AB408 20	1	I

Stock Mouldings




This section displays the A & B Mouldings that are in-stock. The legend indicates the species in which they are available. Of course, all of these profiles can be manufactured in ANY TYPE OF WOOD SPECIES, but are considered special orders.




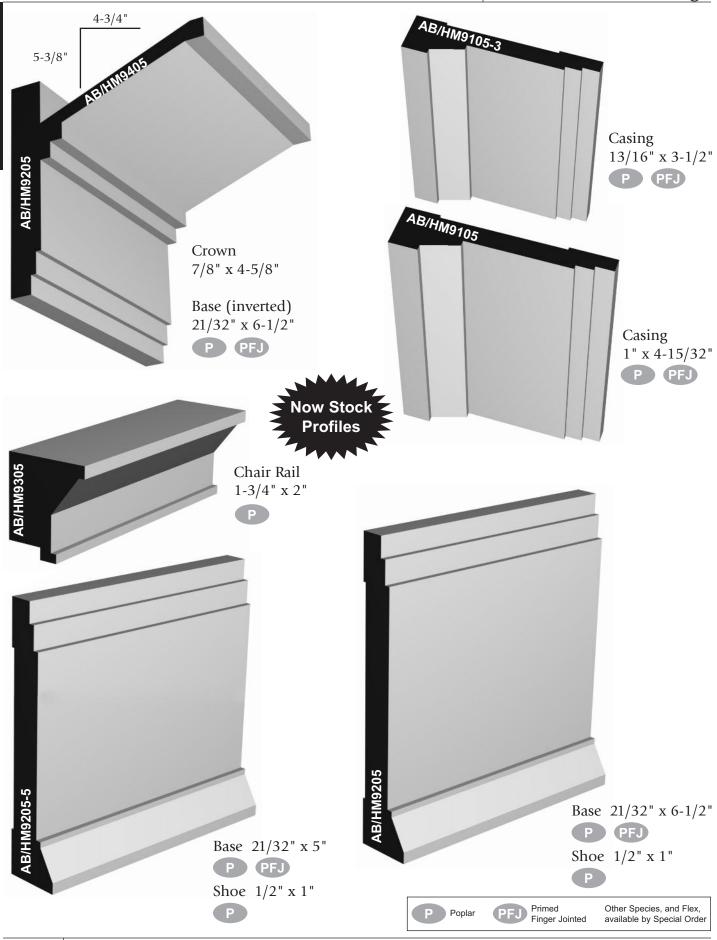







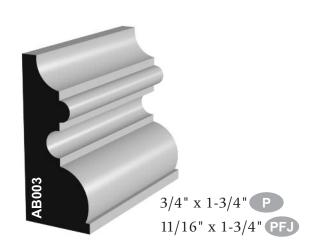

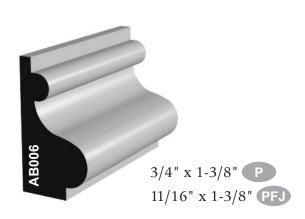

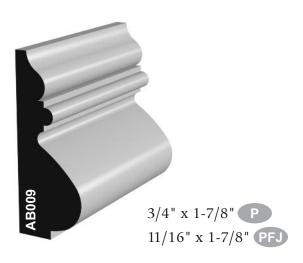

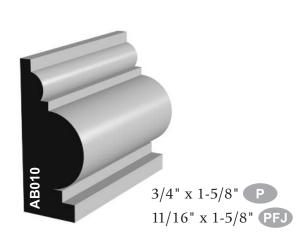











Primed Finger Jointed




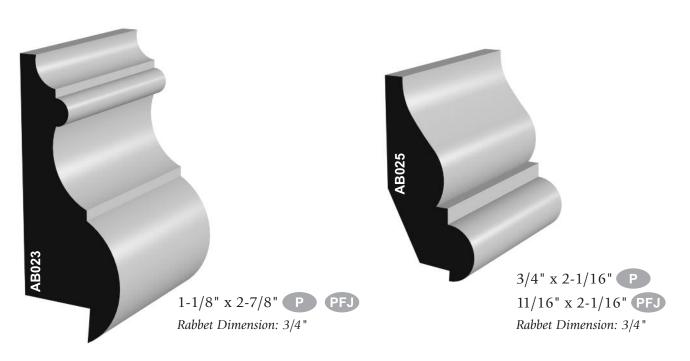

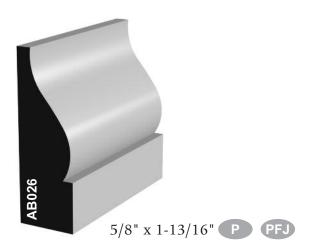

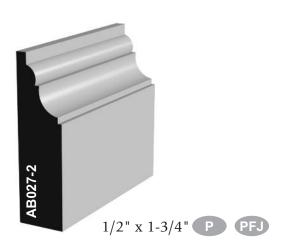

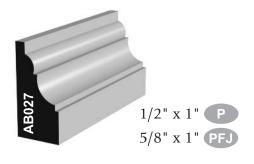

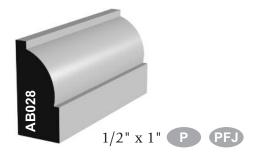











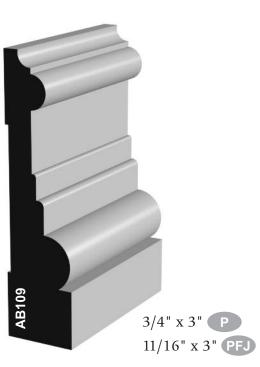

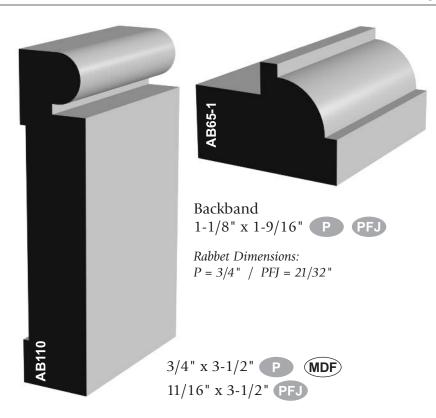












Primed Finger Jointed







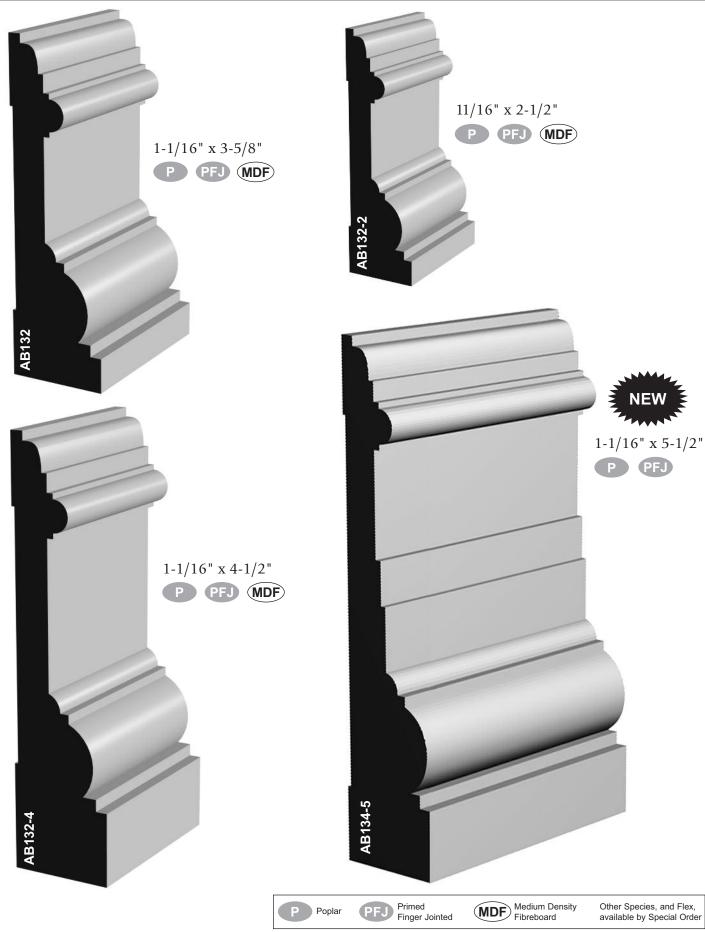



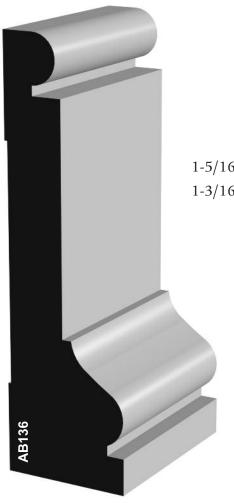

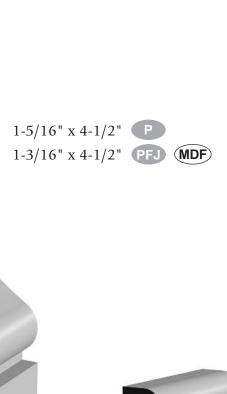


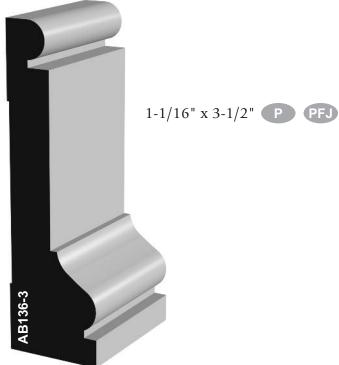







Primed Finger Jointed

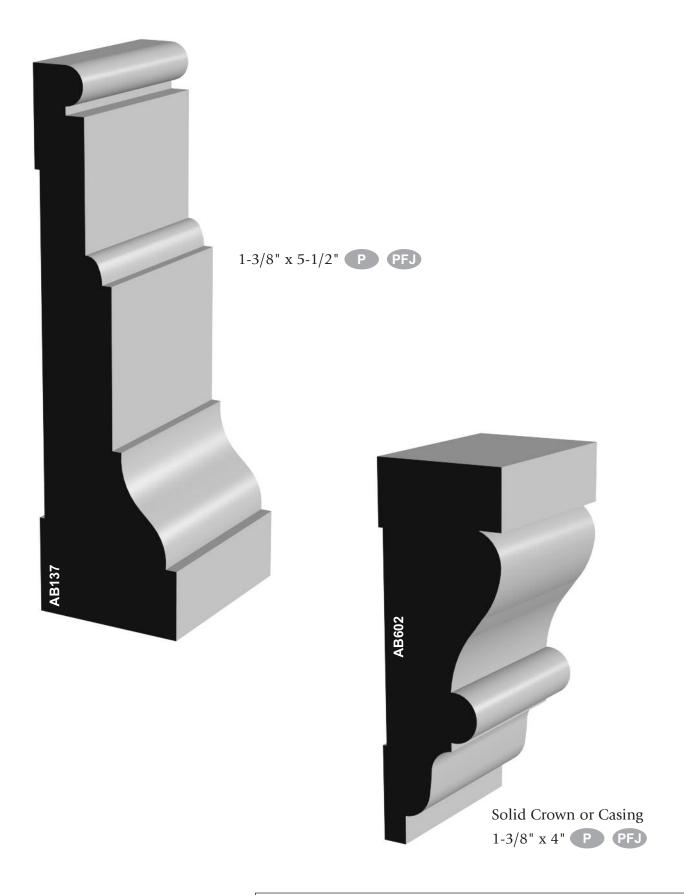









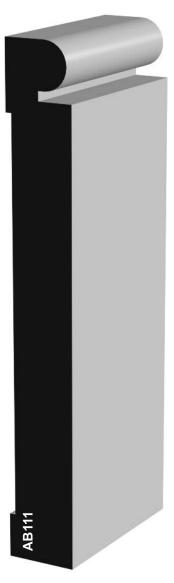

Baseboard 3/4" x 5-1/2" P MDF 11/16" x 5-1/2" PFJ

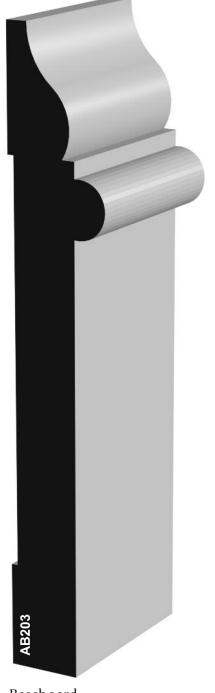

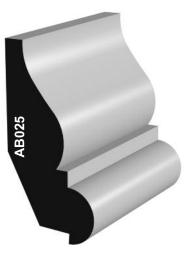


Panel 3/4" x 2-1/16" P 11/16" x 2-1/16" PFJ Rabbet Dimension: 3/4"

Baseboard 1-1/16" x 6-1/2" P PFJ







Primed Finger Jointed

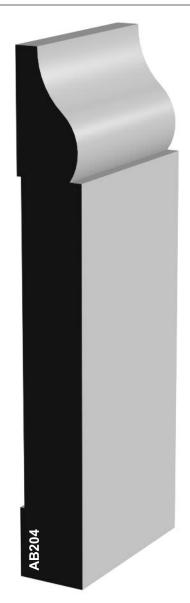

Baseboard 3/4" x 5-1/2" P 11/16" x 5-1/2" PFJ

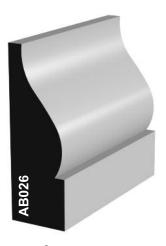


Panel 5/8" x 1-13/16" P PFJ

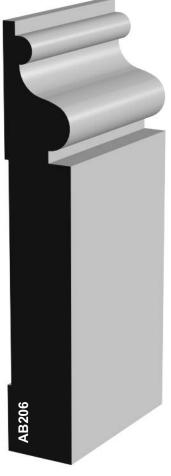



Panel 3/4" x 1-3/8" P 11/16" x 1-3/8" PFJ














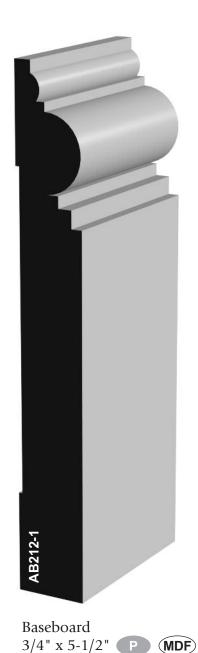

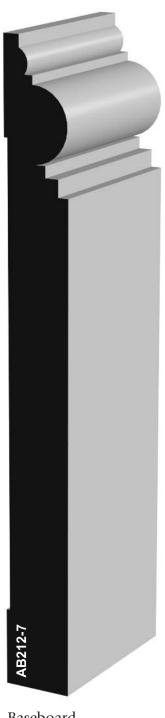

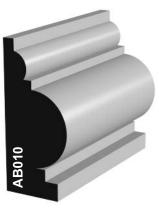

Panel 3/4" x 1-5/8" P 11/16" x 1-5/8" PFJ

Baseboard 3/4" x 7" P MDF

11/16" x 7" PFJ

P Poplar



Primed Finger Jointed Other Species, and Flex, available by Special Order

11/16" x 5-1/2" PFJ






Panel 3/4" x 1-7/8" P 11/16" x 1-7/8" PFJ










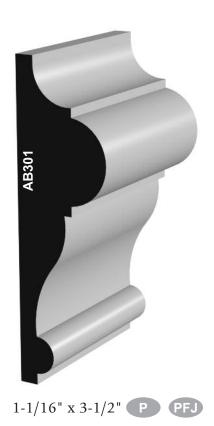



Chair Rail/Ceiling Mould 15/16" x 2-1/2" P PFJ

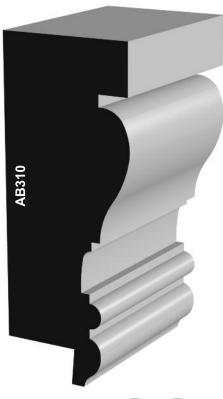

1-3/8" x 3-1/2" P PF. Rabbet Dimension: 3/4"



1-5/16" x 2" P PFJ Rabbet Dimension: 3/4"



1-1/16" x 2" P PFJ Rabbet Dimension: 1/2"





13/16" x 2" P PFJ Rabbet Dimension: 1/4"





Primed Finger Jointed

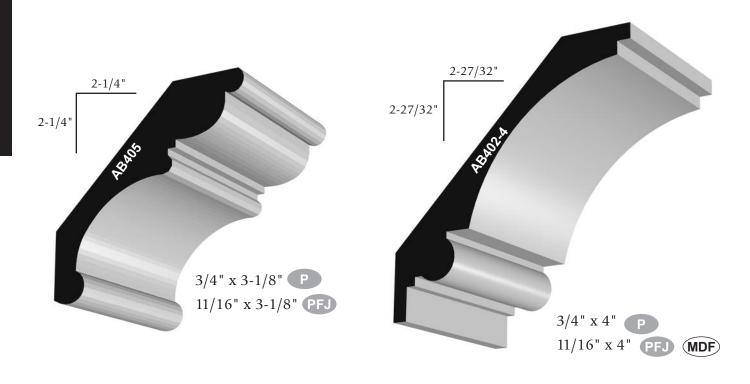

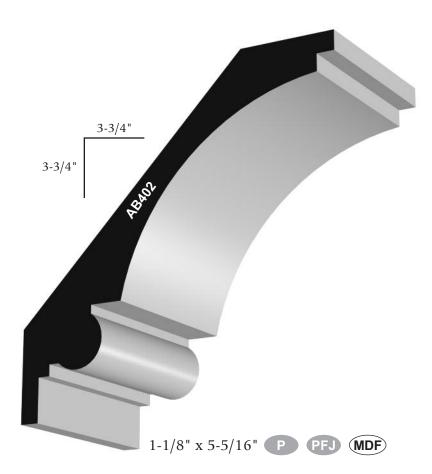











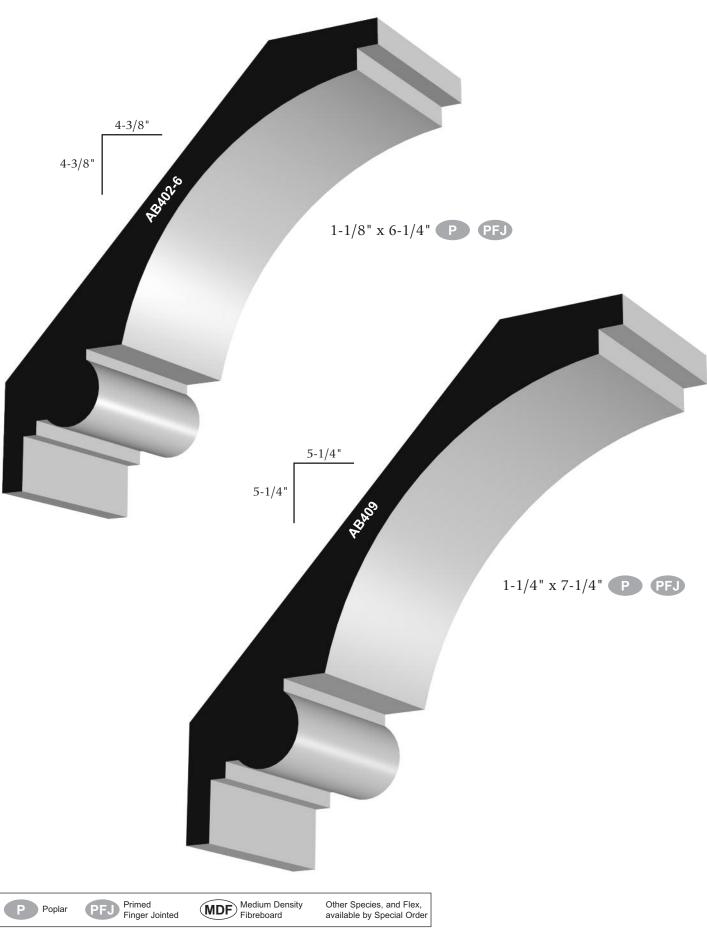




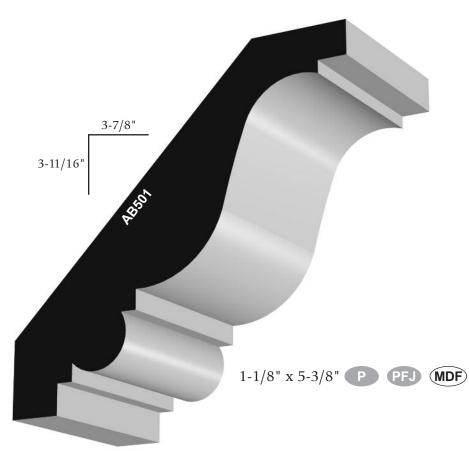






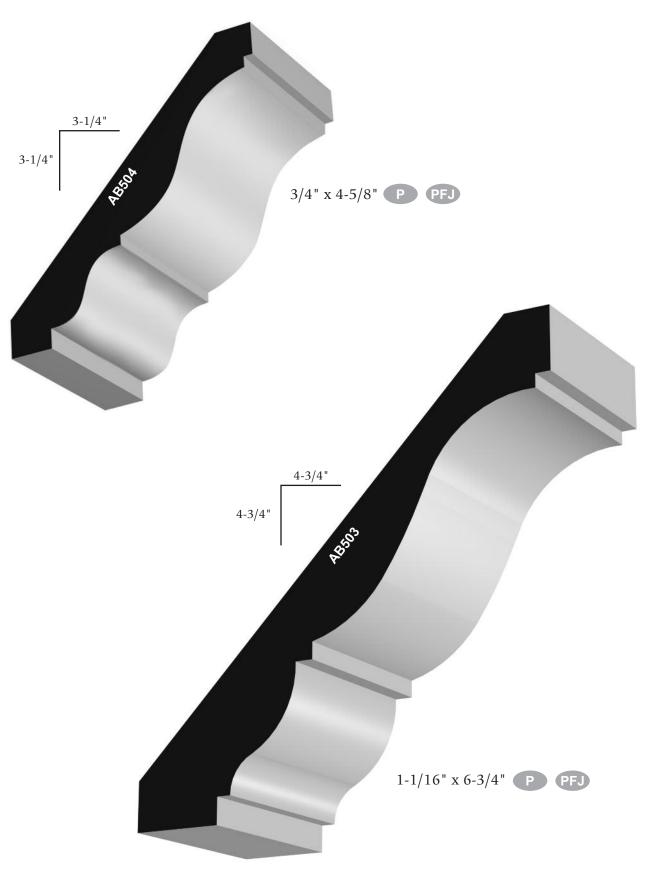








Primed Finger Jointed

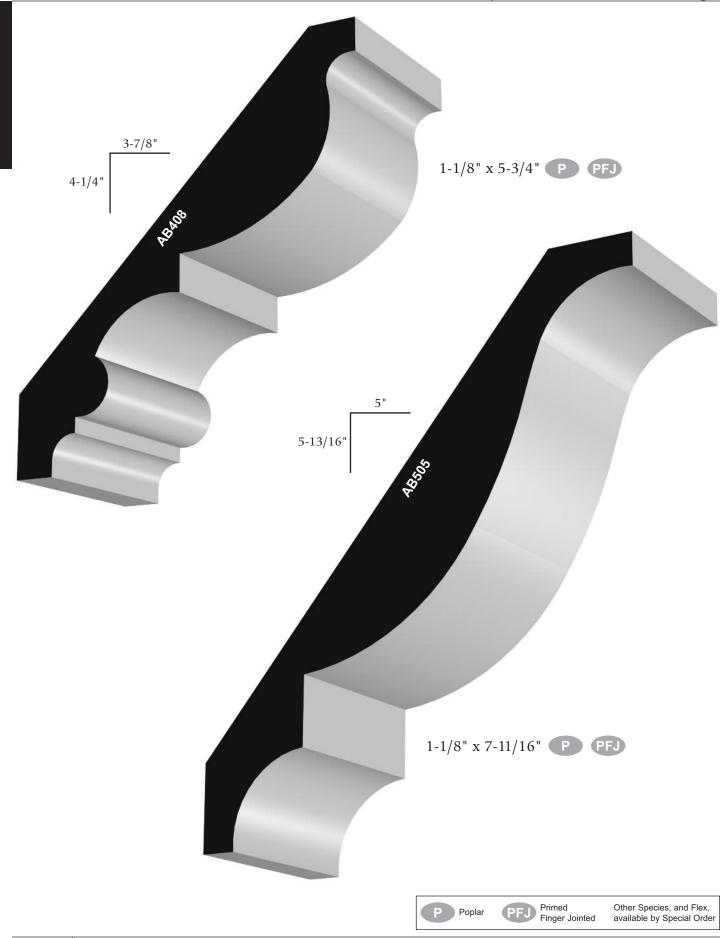

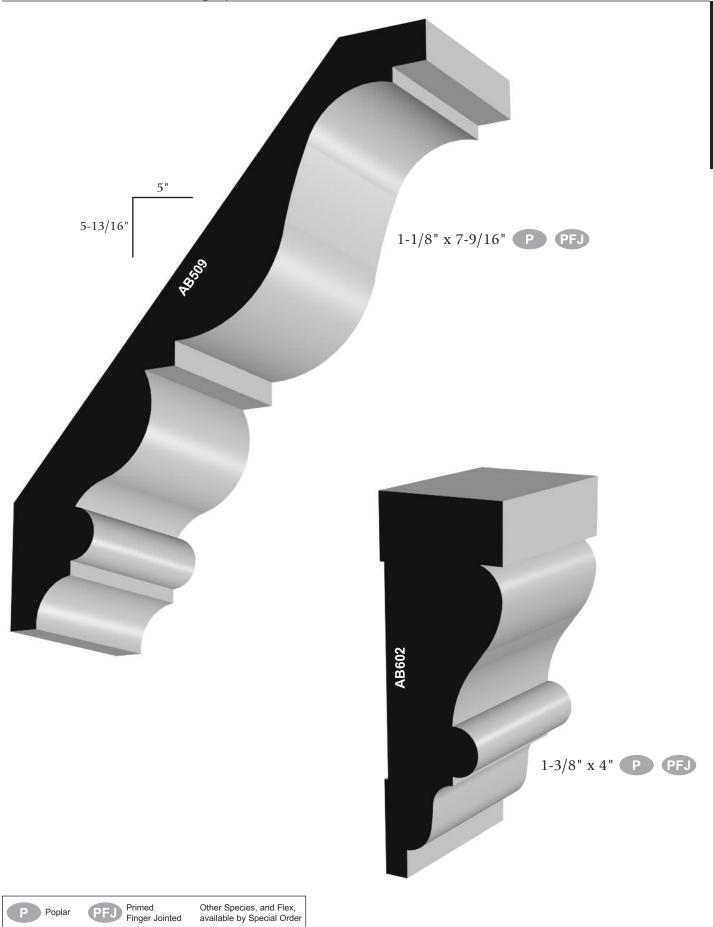

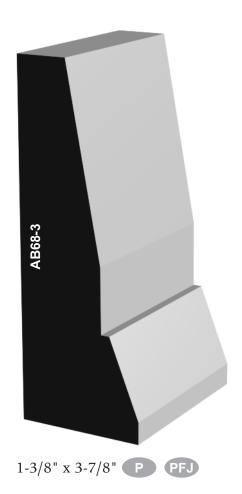

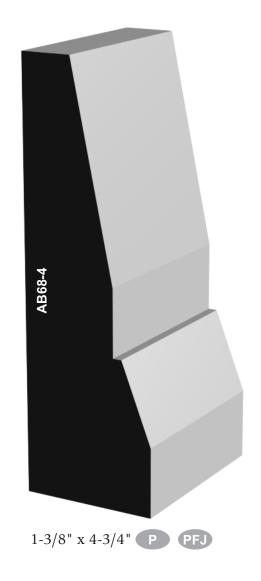






Crown Extenders 3/4" x 3" P 11/16" x 3" PFJ




Crown Extenders 3/4" x 3-1/2" P 11/16" x 3-1/2" PFJ

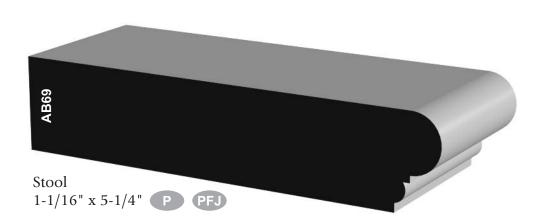





Primed Finger Jointed

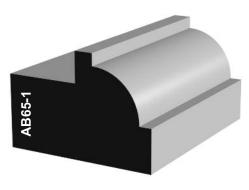


Backband 1-1/8" x 1-9/16"






Rabbet Dimensions: P = 3/4" / PFJ = 21/32"

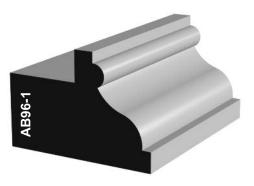


Backband





Rabbet Dimensions: P = 3/4" / PFJ = 21/32"



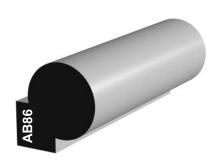

5/8" x 15/16" P PFJ









Primed Finger Jointed

25





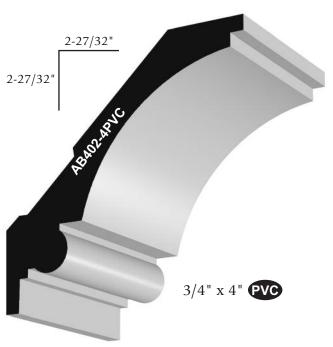


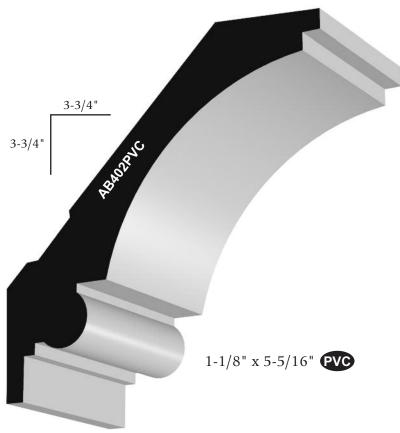

PVC Extruded PVC


Approximately Full Scale www.abwooddesign.com



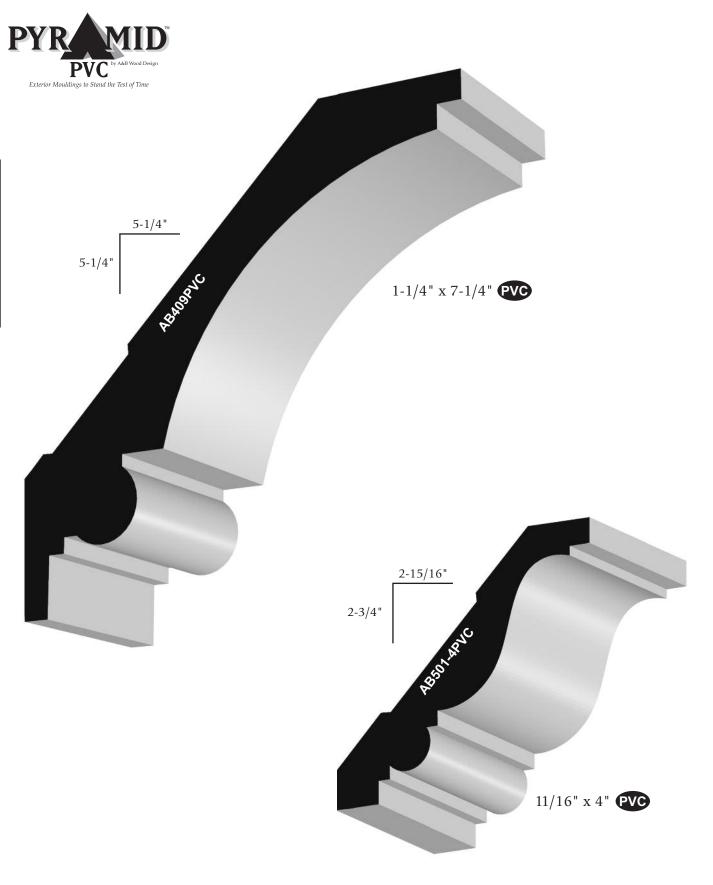





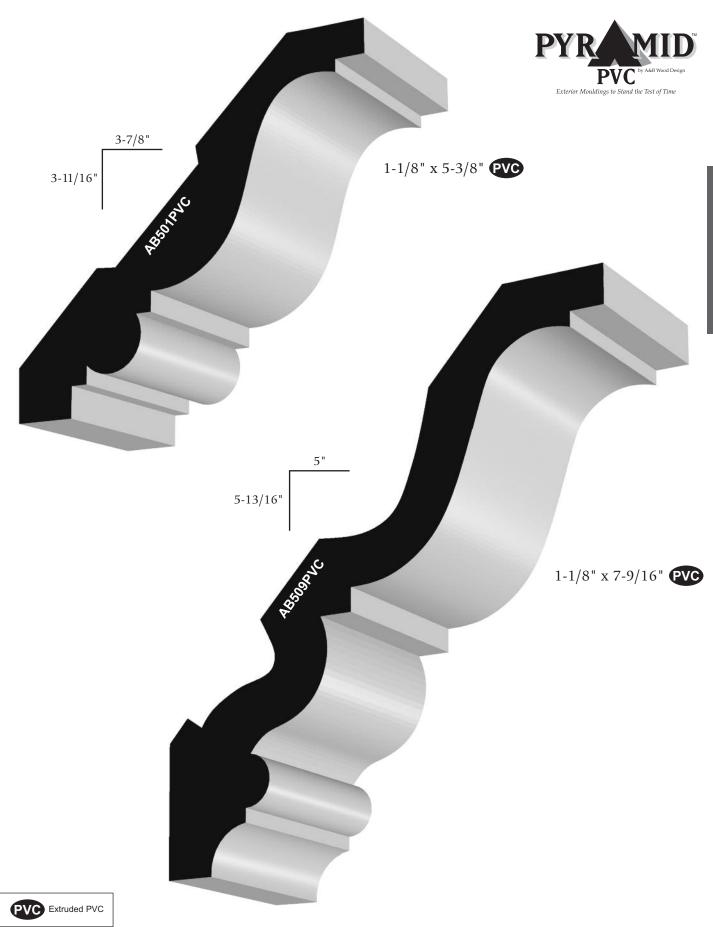

Approximately Full Scale www.abwooddesign.com 27





28






Oxford Classic Wainscot

BEADBOARD & PANEL SYSTEMS

EXTERIOR GRADE S4S BOARDS

Our exterior grade S4S boards are made from finger jointed Paulownia, an exceptionally good sustainable product that resists moisture, insects and decay. Each board is primed with 2 coats of exterior grade primer, buffed in between coats. As a hardwood, it is very easy to machine and work with.

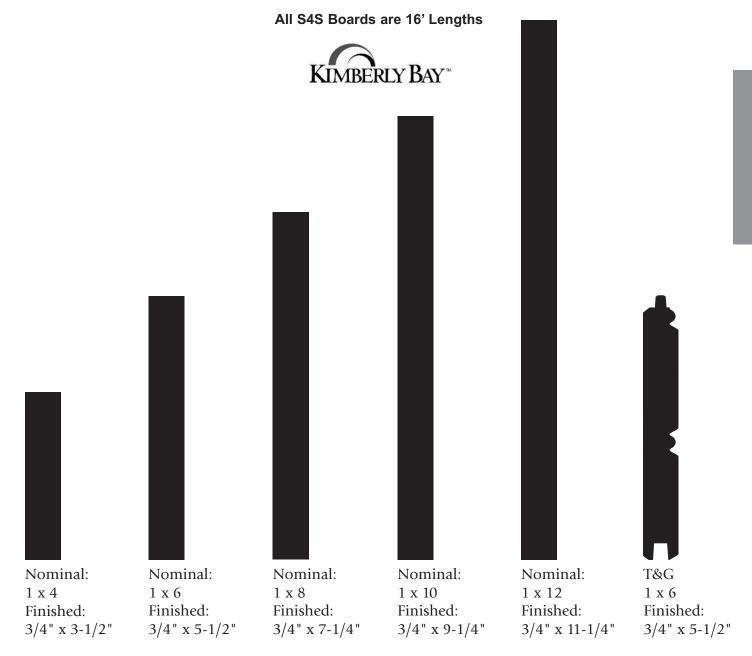

Approximately Half Scale www.abwooddesign.com 29






Oxford Classic Wainscot

BEADBOARD & PANEL SYSTEMS

EXTERIOR GRADE S4S BOARDS

All S4S Boards are 16' Lengths



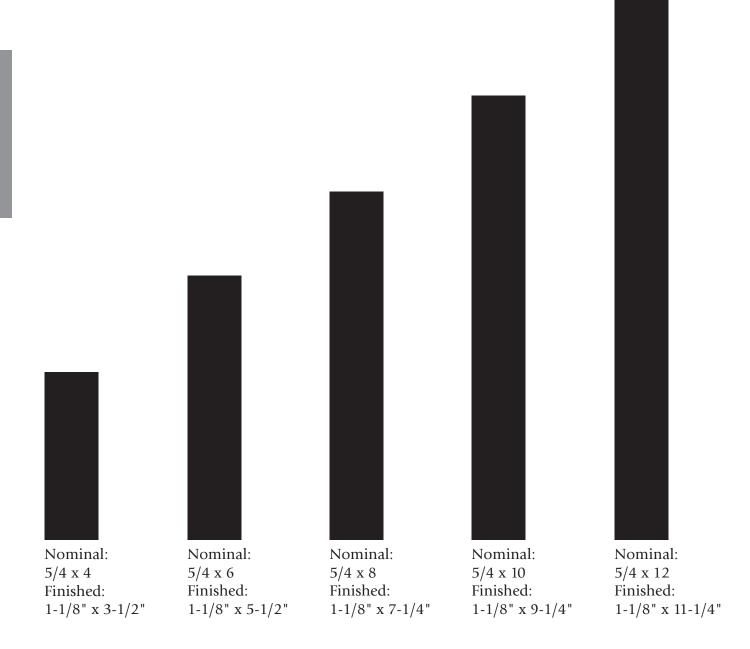

30





OXFORD CLASSIC WAINSCOT

BEADBOARD & PANEL SYSTEMS



AB702

12mm (1/2)" x 48" (MDF) 2" O.C.

AB703

12mm (1/2)" x 48" (MDF) 3" O.C.



Additional Product Options (sold separately):

CAP OPTIONS:



P PFJ




AB311-3





BASE OPTIONS:

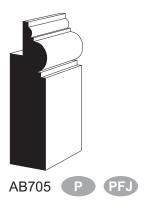

(MDF) Medium Density Fibreboard





Oxford Classic Wainscot

BEADBOARD & PANEL SYSTEMS


CUSTOM PANELED WAINSCOTING

Our Semi-Custom Wainscoting is delivered to you:

- Fully Assembled
- Built to your room dimensions
- Comes standard at 36" tall
- Has equal size panels for individual wall
- Is constructed with individual styles & rails and floating panels

Product Options Include:


PANEL TYPE:

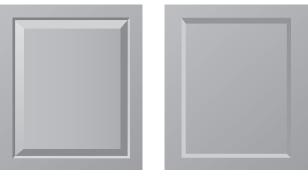



PANEL PROFILE:





STILE & RAIL PROFILE:



Additional Product Options (sold separately):

CAP OPTIONS:







AB110



BASE OPTIONS:



AB212

AB219







CUSTOM PANELED WAINSCOTING

Frequently Asked Questions

- 1 How long does it take to receive my wainscoting? Your order from processing will take 3-5 weeks.
- What is the longest piece of wainscoting you will ship me?
 Your wainscoting will be built and assembled to your measurements, up to 8 feet long. For walls over 8 feet, the wainscoting will be shipped in segments and joined together by you, with blind screws from the back. But don't worry, you will never see the joints.
- What if a piece of wainscoting comes in the wrong length?
 You must take the measurements very carefully! Double check the measurements before sending the order. We double check ours before sending them out.
- Do you offer other sizes?

 No, we have found that 36" is a classic height for wainscoting, if you want it taller, try lifting it off the floor using a taller baseboard moulding!
- Is it hard to install this wainscoting?

 No, any professional can install this, and certainly it is a great project for the weekend DIY professional.
- What do we do about outlets in the wall?

 They can be cut into the wainscoting providing they fall in a panel. If they don't, you will need to have a licensed electrician move the outlets. We never want to alter a panel size to accommodate an outlet!
- What do we do about air vents in the wall?

 They can be cut into the wainscoting providing they fall in a panel. If they don't, you will need to have a licensed H.V.A.C. contractor move the vents. Most times it is moved down toward the floor and a register is built into the base trim.
- 8 Who do we send the order form to? Contact your local A&B Wood Design dealer and fax it to them.



CUSTOM PANELED WAINSCOTING


How to Order



- 1. Draw basic room layout (see Figure 1)
- 2. Label each wall (ie; A, B, C)
- 3. Document each wall dimension
- **4.** Draw your window walls (Figure 2). Include dimensions as shown
- **5.** For stairwells, draw the wainscoting, (Figure 3) include the dimensions as shown

*these dimensions are standard

- **6.** Give us the angle measurements as shown (Figure 4)
 - ◆ Draw a "Plumb Line" up 24"
 - ◆ At the 24" mark, draw a "Level Line" back to the stringer
 - ◆ Take your time, these are critical measurements

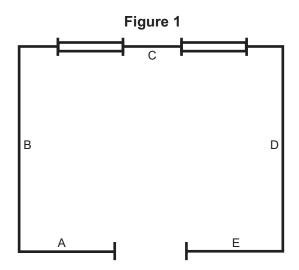




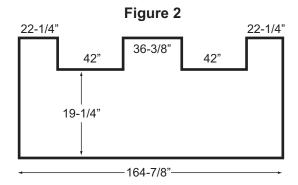


Figure 4



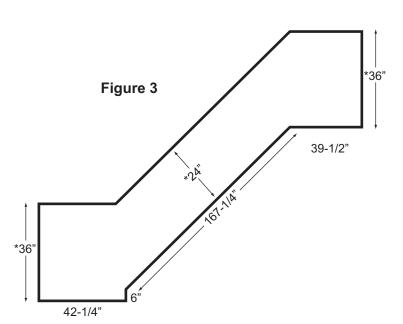

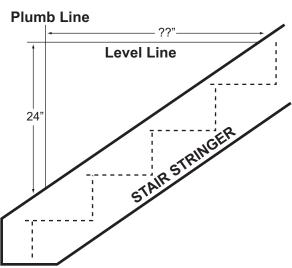

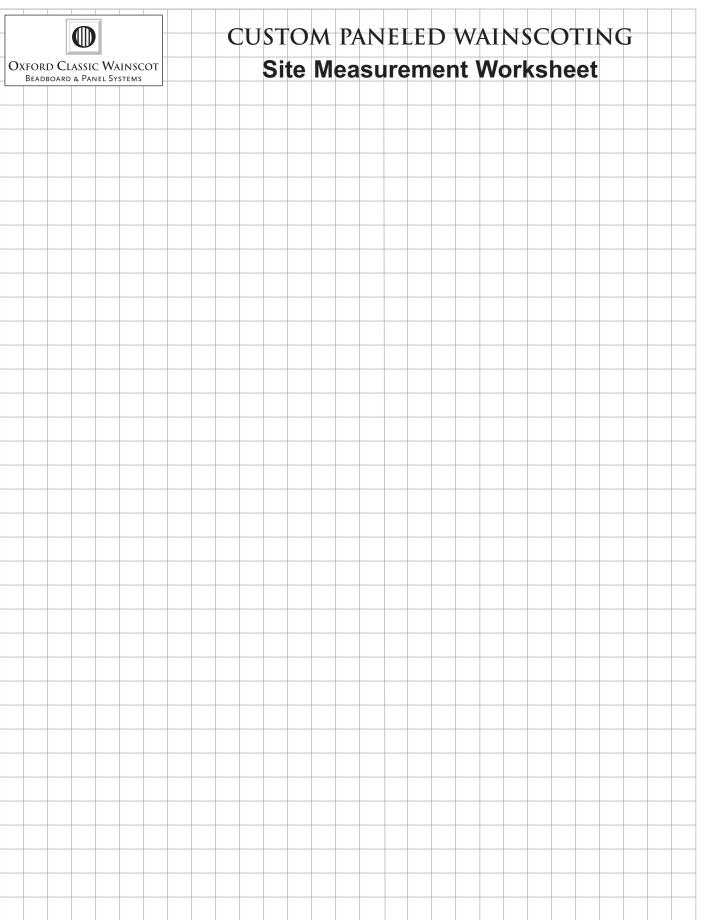

Moulding Combinations



Mouldings are frequently combined to provide a larger composite profile, rendering a more pronounced look. Backbands provide additional depth to Casings, Base mouldings can be used to further enhance Chair Rails, and when inverted, can extend the look of a Crown detail. While the possible combinations are only limited by the imagination, we offer a few to illustrate the potential.





Crown Combination AB206 AB509







Crown Combination AB212-1 AB501









Primed Finger Jointed Other Species, and Flex, available by Special Order







Coffered Ceiling Combination **AB82** AB025









Other Species, and Flex, available by Special Order

Special Order Mouldings

🛓 A & B Wood Design




All of these moulding profiles can be manufactured in ANY TYPE OF WOOD SPECIES.










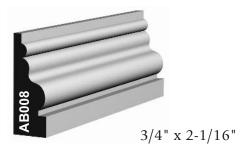

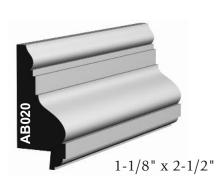









1" x 3-1/2"







^{*}Special Order Items are Available in ANY Species










3/4" x 3-3/16"

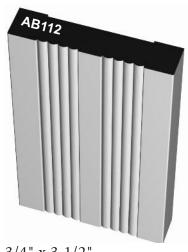


3/4" x 3-1/2"



*Special Order Items are Available in ANY Species



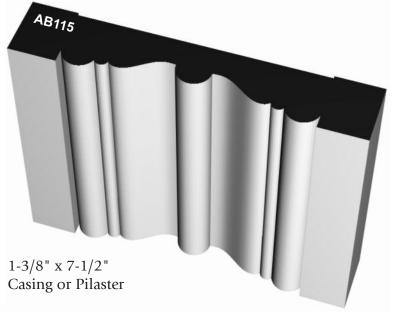









^{*}Special Order Items are Available in ANY Species









3/4" x 3-1/32"





1-1/16" x 4"







1-1/16" x 5"



^{*}Special Order Items are Available in ANY Species





1-3/4" x 5-5/32"





*Special Order Items are Available in ANY Species

































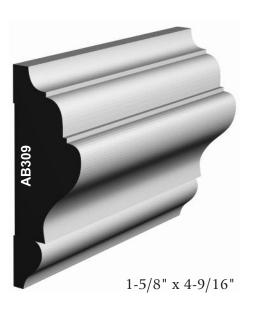



^{*}Special Order Items are Available in ANY Species

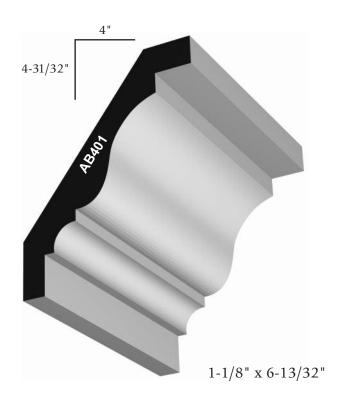


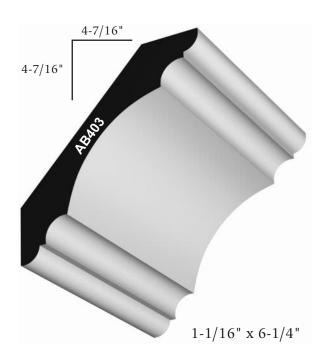

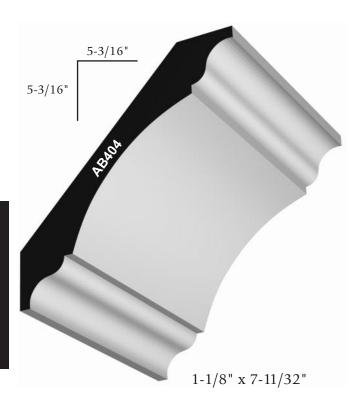


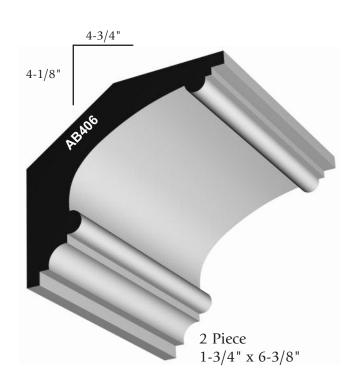


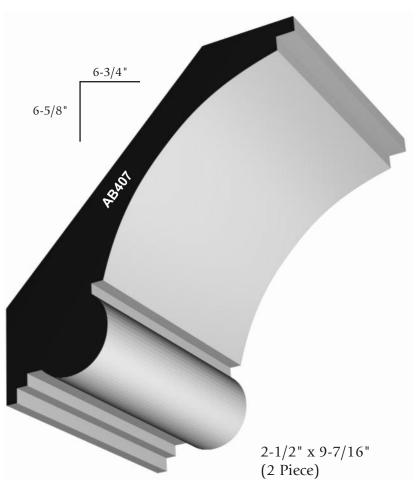

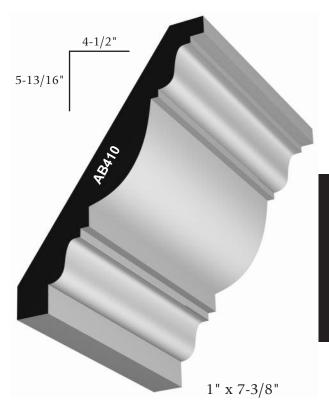

^{*}Special Order Items are Available in ANY Species

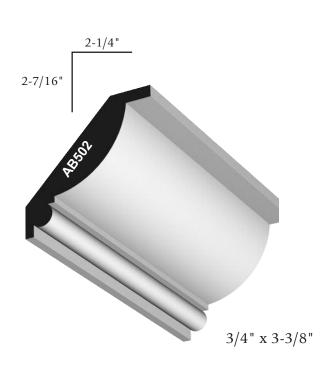

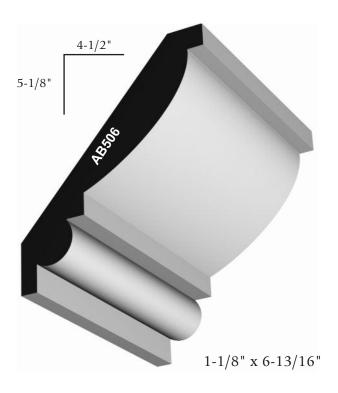









*Special Order Items are Available in ANY Species



Plinth 1-3/4" x 2-7/16"



Plinth 1-1/8" x 4-3/4"



Bead 1-1/8" x 1-1/8"



Backband 1-1/2" x 2"



Backband 1-1/2" x 1-3/4"





Backband 1-1/16" x 2-1/4"



Backband 1-1/2" x 1-7/8"



Crown Extender 3/4" x 3"




Crown Extender 3/4" x 3"



Crown Extender 1-1/32" x 3-1/2"

^{*}Special Order Items are Available in ANY Species



Historic Mouldings



About the Historic Moulding Section...

The following mouldings represent a broad spectrum of architectural periods and styles. They were collected from books, magazines, and historic sites around the country. In designing this chapter, it was impossible to include all mouldings from a certain period. Therefore, the profiles presented here reflect A & B's choices for the best representation of a particular period or style.

The mouldings in this section are grouped according to the following architectural styles:

Federal Colonial Greek Revival
Art Deco Wren & Georgian Tudor

Victorian


While historically appropriate, all mouldings presented here may not be absolutely authentic. In some instances, the profiles have had to be modified in order to reduce prohibitive material costs and/or to enable them to be manufactured using today's machinery. These modifications are minimal, however, and do not detract from the true historic flavor of the mouldings.



Casing 1-1/4" x 4-1/2"



Chair Rail 3/4" x 2-5/8"

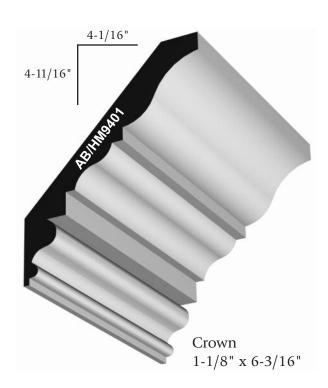



^{*}Special Order Items are Available in ANY Species



Casing 1-5/16" x 4-5/8"



Chair Rail 1-1/8" x 3-3/16"










Base 5/8" x 8-1/2" Shoe 1" x 2-3/4"

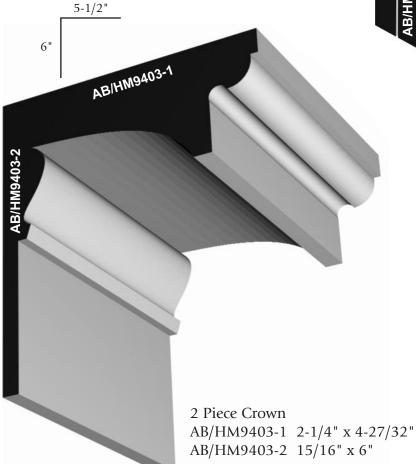



^{*}Special Order Items are Available in ANY Species



Casing 3/4" x 4-1/4"




Chair Rail 1-1/16" x 2-7/8"







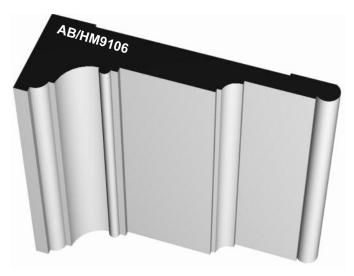

Casing 2-1/8" x 6-3/8"



Chair Rail 1-1/8" x 3-1/4"






^{*}Special Order Items are Available in ANY Species



Casing 1-1/8" x 4-13/16"



Chair Rail 1-5/8" x 3-11/16"

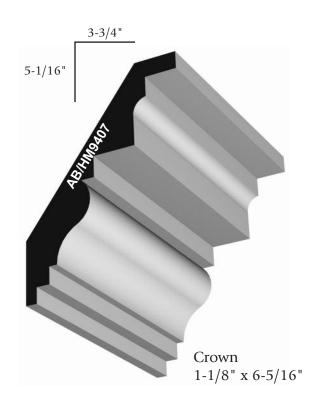









Casing 1-21/32" x 4-3/16"

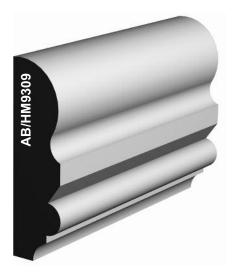



Chair Rail 1-1/8" x 4"

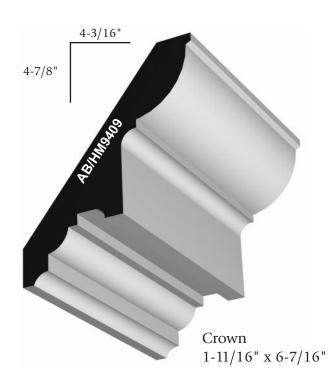




^{*}Special Order Items are Available in ANY Species

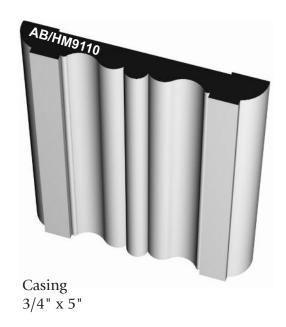

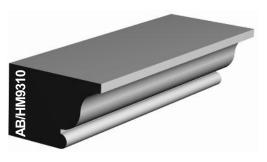

Chair Rail 1-1/2" x 2-1/4"

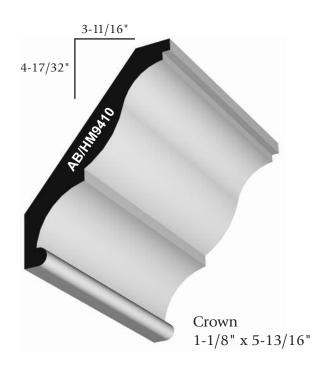













Available at:



800.669.9871 Fax 203.888.0493 | www.abwooddesign.com